

Thank you for purchasing our equipment. Please read this manual carefully and heed the safety warnings and instructions before installing, using or repairing the equipment. This will ensure not only the protection of persons, but also the long life of the equipment.


TECHNICAL PARAMETERS

Product code	OR01	OR02
Power	AC 230V/50Hz, max. 2000W	AC 230V/50Hz, max. 2500W
Adjustable power level	800/1200/2000W	1000/1500/2500W
Adjustable thermostat	YES	YES
Overheating protection	YES	YES

SAFETY NOTICE



- Children and people who need supervision may only use the device in the presence of a responsible person and must understand the risks of misuse. Children must not play with the device.
- Regularly check the power cord, if it is damaged, the device must not be used anymore.
- The device is intended for household use only.
- Do not cover the device with anything and do not hang anything on it.
- The device must only be operated under supervision. When not in use, always switch the device to the OFF position and disconnect the power cord from the power outlet.
- Do not place the device directly under an electrical outlet.
- Do not hide the power cord under the carpet, etc. Only place the supply cable where it will not be tripped over or damaged.
- Do not use an extension cord as it may overheat and cause a fire hazard.
- Use the device in a well-ventilated area. Do not insert or allow objects to enter the vent or exhaust port. Do not block air inlets/outlets with anything.
- Use the device on a stable, level and dry floor.
- Do not place the device near combustible materials. Maintain a minimum of 1m clearance on all sides of the device.
- Do not use the device in areas where gasoline, paint, or other flammable liquids are stored. This is because there are hot, arcing or sparking parts inside the equipment.
- Do not use the device in the immediate vicinity of a bath, shower or swimming pool. Never place the device where it could fall into a bathtub or other container of water.
- When the surface of the device is hot during use, take extra care even after the device is switched off. The surface will remain hot for a period of time after switching off.
- **WARNING:** This equipment is filled with a precise amount of special oil
- When disposing of the equipment, the regulations regarding oil disposal must be observed.
- Do not use the device in a room with a floor area of less than 5m²
- At the end of the equipment's service life, dispose of it in a designated place. Neither the equipment nor the oil in it belongs in normal household waste.

DESCRIPTION OF EQUIPMENT

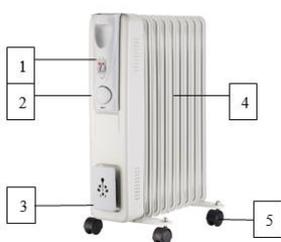

1. Power switch
2. Thermostat knob
3. Cable storage
4. Radiator ribs
5. Wheels

ASSEMBLY

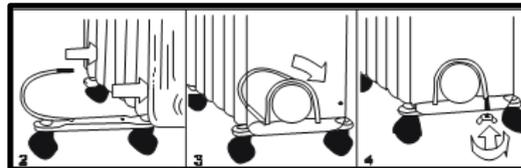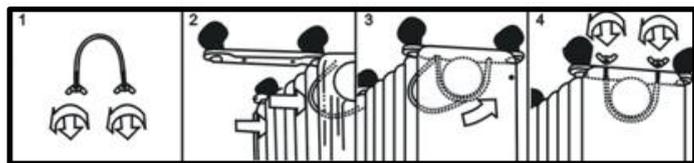

1. Place the device upside down in a place where it is stable and will not scratch.
2. Unscrew the wing nuts from the supplied U-bolt, attach the U-bolt to the U-flange between the first and second ribs (near the front cover).
3. To attach the wheel mounting plate to the radiator body, insert the threaded ends of the U-bolt into the holes on the wheel mounting plate.
4. Screw the wing nuts back onto the U-bolt and secure them properly.
5. Unscrew the ball nut from the wheel, align the shaft into the hole in the wheel mounting plate, insert it and screw on the ball nut.
6. Repeat steps 2, 3, 4 and 5 on the rear of the radiator to mount the rear wheels

INSTRUCTIONS FOR USE

1. Before using the device, make sure it is on a level and stable surface, if it is placed on a sloping surface or slope, it may be damaged.
2. Set all controls to the OFF position and insert the plug into a grounded outlet. Make sure the plug fits firmly.
3. Turn the thermostat knob clockwise to the MAX position and turn the unit on:
 - Switch the switch to the I
 - Move the switch to position II
 - Switch both switches to position I and II simultaneously
4. Once the room has reached the desired temperature, slowly turn the thermostat knob counterclockwise until the indicator light goes out. You can now leave the thermostat at this setting. Once the room temperature drops below the set temperature, the unit will automatically turn on until the set temperature is reached again. In this way, the room temperature remains constant while using electricity as economically as possible
5. To change the room temperature setting, turn the thermostat knob clockwise to increase the temperature or counterclockwise to decrease it.

COMMENT:

- The appliance is equipped with an overheating protection system that switches off the heater when parts of the heater become excessively hot.
- To turn the device off completely, turn all controls to the off position and pull the plug from the socket.

MAINTENANCE

- Always unplug the appliance and allow it to cool down before cleaning.
- Wipe the device with a soft damp (not wet) cloth. Allow the equipment to dry before using it again.
- Prevent water or moisture from entering the equipment.
- Do not use any cleaning agents.

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations.
On request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz/en.



SOLIGHT

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.