

Thank you for purchasing our product. Before using or repairing the device, please read this manual carefully and pay attention to the safety warnings and instructions. This will ensure not only personal safety but also the long-term durability of the device.

CHARGING

- The USB-C charging port is located under the rubber seal on the side of the device.
Charging time: approx. 3 hours (when using a 5 V / 1 A USB adapter)
Lighting time: min. 1.5 hours / max. 3 hours
- During charging, 4 indicators light up sequentially. Once all 4 are lit, the device is fully charged.

LIGHTING MODES

- Switch between lighting modes by repeatedly pressing the '⏻' button.
5 lighting modes: Cool white, warm white, cool + warm white, red, red flashing
- Press the '⏻' button followed by the '☺' button to enter sensor control mode. You can now switch the device on and off by waving your hand approximately 5 cm in front of the torch. Press the '☺' button again to exit sensor control mode.

WARNING

- Do not attempt to charge the torch in a damp or wet environment.
- Do not disassemble or repair the device, and do not expose it to extreme temperatures or open flames.
- Once fully charged, do not leave the torch connected to the mains for long periods, as overcharging may reduce the battery's lifespan.
- Store the light in a cool, dry place away from direct sunlight or extreme temperatures.

The light source in this lamp is non-replaceable; at the end of its service life, the entire lamp must be replaced and disposed of at a designated collection point. This product contains a light source which, for design reasons, cannot be removed for verification, and therefore the entire product is considered to be the light source.

A CE Declaration of Conformity has been issued for the product in accordance with applicable regulations.
Available on request from the manufacturer: info@solight.cz, or for download at www.solight.cz/en.

