

EN Operating instructions for Solight WO44 lamp



Dear customer, thank you for purchasing our product. Please carefully read and abide by the following instructions to ensure that this product is used safely and to your complete satisfaction. This will also help avoid any improper use or damage. Prevent any unskilled handling of the device and always follow the principles of use for electrical appliances. Store these instructions in a safe place. For use in the home or indoors. Never expose the device to high levels of humidity (e.g. in a bathroom), and prevent the product from coming into contact with liquids.

First use: The lamp has a built-in Li-Ion 1800mAh battery, which can power the lamp for approx. 3 hours. The lamp is charged using the USB cable; connect one end to the input on the lamp and the other into a computer or charging adapter, which is then plugged into the power socket. The lamp takes approx. 4 hours to charge. While charging, the red LED on the back of the lamp is lit; the light goes out when the lamp is fully charged. The lamp can be powered permanently from the power socket, but this reduces the battery lifetime.

Descriptions


1. Button for switching lamp on/off and changing brightness of the main LED source.
2. Button for switching on/off the atmospheric lighting mode.
3. Coloured circle for changing colour of atmospheric lighting.

Controls

Briefly press button (1) to turn on the lamp. Long press to change light intensity (dimming).

Briefly press button (2) to turn the atmospheric lighting on/off. Press and hold to turn on automatic colour-blending mode. You can turn it off by a short touch on any color.

Press the coloured circle (3) to change the light colour.

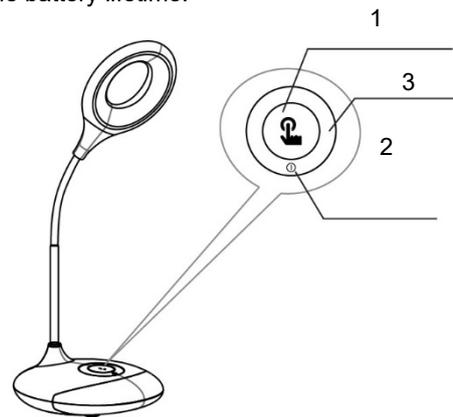

Power supply: 5V / min. 1000mA

Consumer information: If the product that is being sold is not in conformity with the purchase contract when received, or if a defect is identified after receipt within the warranty period, the buyer can exercise their rights stemming from liability for defects with the seller.

A defect is not a change to a product's properties that occurred during the warranty period as a result of normal wear and tear or improper use of the item (or any part thereof) and improper use of the goods.

A shortened battery or light bulb lifetime cannot be considered a defect and or lead to any claim.

The warranty period is not equal to the lifetime of a battery or a light bulb.

The warranty is void if the consumer violates any of the terms (contrary to the user manual) below such as:

- If the consumer uses the product in wet, dusty or chemically aggressive environments, etc.
- Mechanical damage.
- A defect caused by use of the product that falls outside the norm.
- Any use that is contrary to the laws, technical standards or safety regulations applicable in the given country.
- Presumed defects the consumer is not able to demonstrate or otherwise document to the seller or the authorized repair service.
- The returned product shall be complete, including all accessories, in its original packaging and with a duly filled out warranty card and/or a receipt of purchase.
- Copies of warranty cards and/or receipts of product purchase that have been modified, filled in after the fact, are missing original data or are otherwise damaged shall not be accepted as documents proving the purchase of the returned product.

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Manufacturer: Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06

