


Thank you for purchasing our product. Before installing, using or repairing the product, please read this manual carefully and pay attention to the safety warnings and instructions. This will ensure not only personal safety but also the long-term durability of the product.

INSTALLATION

1. Drill holes in the mounting surface and insert wall plugs into them [Fig. 1A].
Measure the hole spacing according to the holes [Fig. 1B].
Secure the mounting brackets to the surface using screws [Fig. 1A].
2. Attach the luminaire body by snapping the mounting brackets onto the luminaire.
3. Feed the power cable into the luminaire body through the cable gland. Connect the cable to the terminal block, which is secured to the luminaire base.
4. Install T8 LED tubes suitable for the specific version of the luminaire. Tubes are not included.
Fit the luminaire diffuser [Fig. 4B]
5. Secure the luminaire with the clips.


WARNING

- Prevent improper handling of this appliance and always follow the guidelines for using electrical appliances.
- Do not hang anything on the light fitting or cover it with anything.
- Keep the user manual in a safe place.
- Installation must only be carried out by a qualified technician
- Operating temperature: -20°C to 50°C.

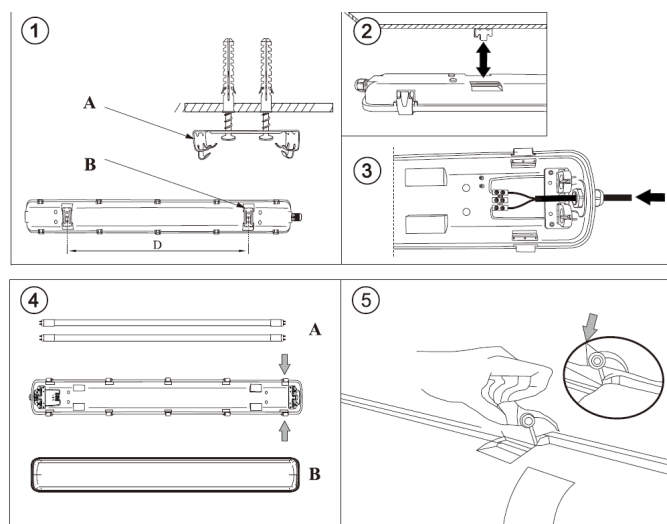

Tube power supply

The luminaire is designed for tube power supply from one side only. The pins on the tube are unconnected on one side, and the pins on the power supply side (marked L + N) are used to connect the supply voltage.

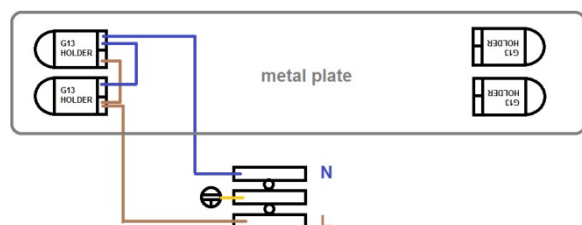

A CE Declaration of Conformity has been issued for the product in accordance with applicable regulations. Available on request from the manufacturer: info@solight.cz, or for download at www.solight.cz.

