



The set consists of a doorbell button (transmitter) and a doorbell (receiver). The doorbell is designed for permanent connection to a 230 V AC/50 Hz electrical network. Transmission between the button and the doorbell takes place via radio waves with a frequency of 433.92 MHz. The range depends on local conditions and can reach up to 180 m in open space without interference. The set has a so-called function pairing (Learning code) – the button is able to generate its own pairing code, which the doorbell receives and stores in its memory. The set can thus be expanded with additional transmitters or receivers. The pairing function also prevents the set from interfering with neighbouring doorbells. For correct use, please read the instructions for use.

Doorbell description:

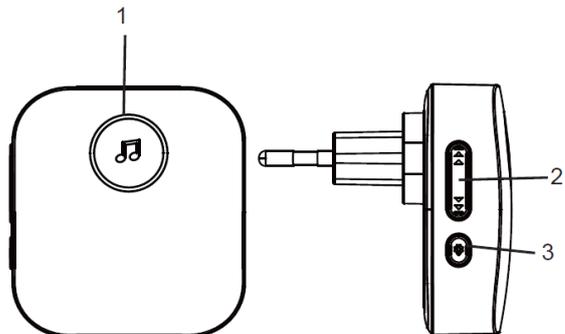

- 1. LED indicator and melody test button
- 2. Changing the ring melody
- 3. Change volume / Pairing

Button description:

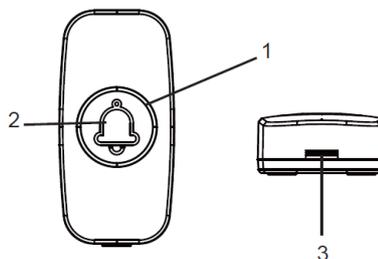

- 1. LED indicator
- 2. Ringer button
- 3. Protrusions for opening the cover

Specifications



Transmitter range	180 m in open space
Transmission frequency	433.92 MHz
Ringing volume	5 levels 0 - 25 - 50 - 75 - 100 dB(A)
Number of melodies	60
Power supply	AC 230V / 50Hz
Power consumption of doorbell in standby mode	<0.4W
Button power supply	1 x 3V (CR2032) battery
Waterproof button protection	IP56
Operating temperature of doorbell	-10 °C to +45 °C
Button operating temperature	-20 °C to +50 °C

Pairing the button with the doorbell

1. Plug the doorbell into a 230 V AC/50 Hz socket.
2. Press and hold the pairing button on the doorbell for approx. 5 seconds.
3. Release the button when the indicator light on the doorbell lights up.

The doorbell will switch to pairing mode, which lasts 25 seconds. During this time, press the button on the transmitter. When the doorbell melody sounds, the button is paired (pairing mode is then turned off).

To pair multiple buttons, repeat steps 1, 2, and 3 for each button. A maximum of 8 buttons can be paired with one doorbell. One button can be paired with a maximum of 15 doorbells.

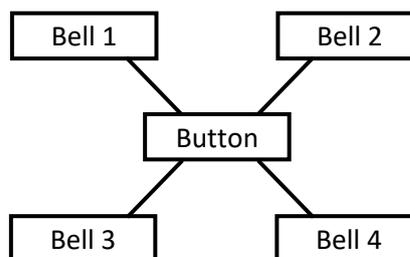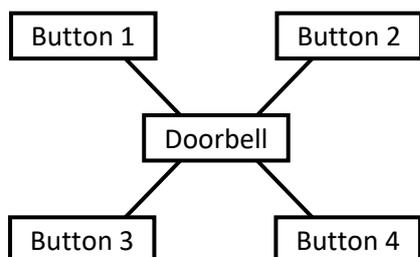

Note: The bell has an internal memory that stores the codes of currently paired buttons in case of a power failure. Therefore, it is not necessary to pair the buttons again after a power failure. The receiver is intended for indoor use only.

Deleting paired buttons from memory

1. Hold down the pairing button on the doorbell.
2. Plug the doorbell into an electrical socket.
3. The LED on the doorbell will light up after approximately 5 seconds. Release the button.
4. The LED will turn off and the memory will be cleared.

Selecting the ring tone and volume

1. Use the buttons  or  on the doorbell to select the ringtone melody.
2. Press the volume control button  repeatedly to select one of five levels: 0 - 25 - 50 - 75 - 100 dB(A). 0 dB(A) is only a light signal without sound.

Test melody button on the doorbell

1. The first time you press the button, the LED indicator will light up. Wait for the LED to go out.
2. When you press the button a second time, the selected melody will play. There is no need to search for a button to change the melody.

Button placement

1. Start by pairing the button with the doorbell.
2. Before installation, test the range and reliability of the device in the selected location. The button is weather-resistant. Even so, choose a location where the button is protected, e.g. in a recess in the wall.
3. Attach the bottom cover of the button to the base using double-sided adhesive tape or screws. Use the marked locations on the bottom cover for screwing. Remove the bottom cover before installation and drill through the two marked locations.

Note: Do not place the button directly on metal objects or materials containing metal, such as steel posts or doors with metal frames. In such cases, the device may not work properly.


Troubleshooting:

If the receiver does not ring repeatedly after pressing the button on the transmitter, check:

- whether the distance between the transmitter and receiver is too great
- whether there are strong sources of signal interference between the transmitter and receiver (radio and wireless networks, large metal objects, reinforced concrete walls, etc.)
- if the problem persists, contact your dealer.

Opening the transmitter and replacing the battery

1. Insert a flat screwdriver between the tabs on the button cover and carefully turn it.
2. Lift off the cover and slide out the battery.
3. Insert a new battery, ensuring correct polarity.
4. Close the button cover and snap it firmly into place.

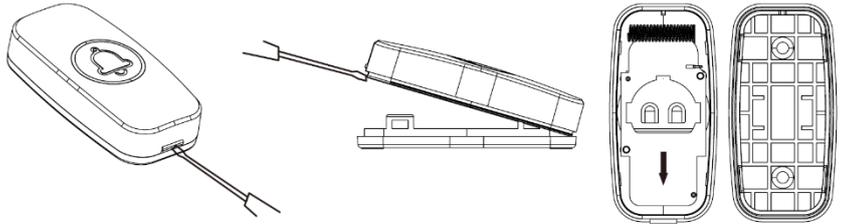

The product has been issued with a CE Declaration of Conformity in accordance with applicable regulations. Available on the website or upon request from the manufacturer: info@solight.cz

Solight Holding s.r.o. declares that the product complies with the requirements and provisions of Directive 2014/53/EU. The device can be freely operated in the EU. The Declaration of Conformity is available at www.solight.cz/en.

The product can be operated on the basis of general authorisation No. VO-R/10/05.2014-3.



SOLIGHT